



Bigeye P

P-1100

- 11 Megapixel sensor
- Up to 60 seconds exposure time
- Outstanding signal/noise ratio

基本描述

11 Megapixel CCD camera, cooled ON Semiconductor 35 mm sensor

The Bigeye P-1100B, P-1100C is a high-resolution cooled CCD camera. It includes a sensitive 35 mm ON Semiconductor sensor. Due to the cooling to 0°C, this camera features high-resolution imaging with outstanding signal-to-noise ratio.

Benefits and features:

- 11 Megapixel OnSemi CCD sensor with anti-blooming circuit, 1.6 fps / 3.2 fps with binning, Peltier cooled (0°C absolute), excellent dynamic range, 1 ms up to 60 seconds exposure time

Models:


Bigeye P-1100B Cool (Monochrome), GigE

Bigeye P-1100C Cool (Color), GigE

性能参数

Bigeye P	P-1100
接口	IEEE 802.3 1000baseT
分辨率	4024 (H) × 2680 (V)
传感器	ON Semi KAI-11002
传感器类型	CCD Progressive
传感器尺寸	Type 35 mm
像元尺寸	9 μm × 9 μm
标准镜头接口	F-Mount

Bigeye P	P-1100
最大满帧帧率	1.6 fps
ADC	14 bit
缓存 (RAM)	
	输出
Bit位数	12 bit
	工作条件/尺寸
工作温度	0 °C to +40 °C
电源要求 (DC)	12 V
功耗	36 W @ 12 VDC
重量	1390 g
尺寸(L × W × H in mm)	143 × 90 × 99 (including connectors)
符合规范	CE: 2014/30/EU (EMC), 2011/65/EU (RoHS)

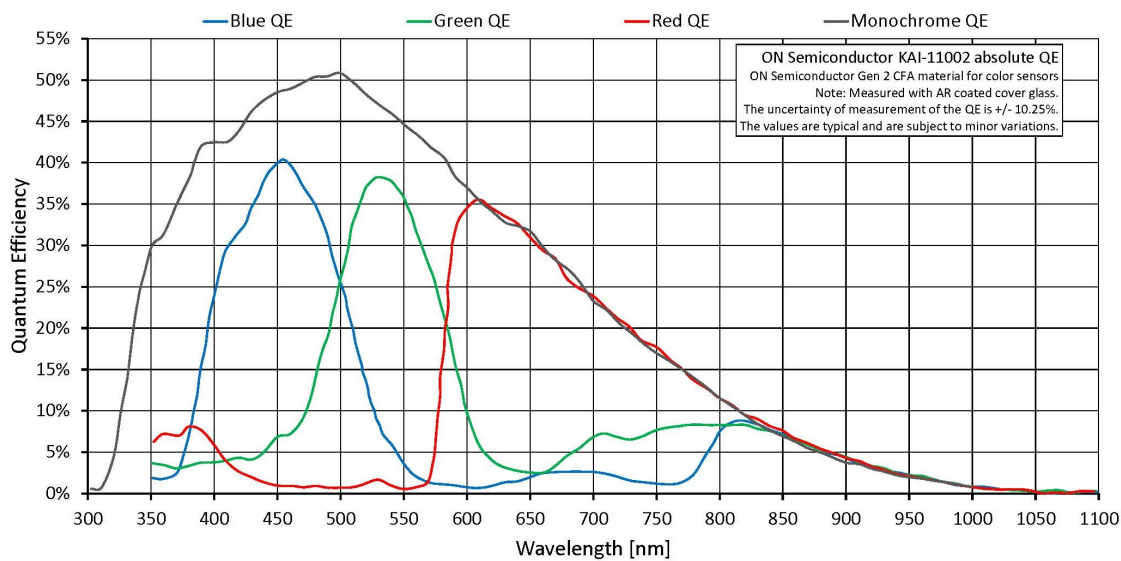

特性

- Binning (1 x 2)
- Gain (6 dB)
- Exposure time 1 ms – 60 seconds
- Background correction
- Continuous mode (image acquisition with maximum frame rate)
- Image on demand mode (triggered image acquisition)



In combination with Allied Vision's AcquireControl software, extensive image analysis functions are available:

- BCG LUT (brightness, contrast, gamma)
- Auto contrast
- Auto brightness
- Analyze multiple regions (rectangular, circle) within the image
- Real-time statistics and histogram display



应用场景

The Bigeye P-1100B/C is the perfect choice for image acquisition with high resolution and low noise. Exposure times from 1 ms up to 60 seconds qualify this camera for a variety of applications. Short exposure times with low trigger latency ensure sharp images of moving objects. Long exposure times with the cooled sensor produce images with outstanding low noise.

- High resolution, low noise image acquisition of still and moving objects
- Low noise images with long exposure times (cooled sensor)
- Scientific imaging
- Medical imaging